


CREATE
your STYLE™
with CRYSTALLIZED™ – Swarovski Elements

MOBILE PHONE CUSTOMISATION
SPARKLING COMPANION



SPARKLING COMPANION

Mobile phone customisation

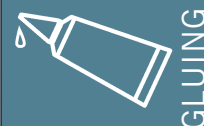

Elemente

1

Flat Backs
No Hotfix
Art. 2028
SS6
Crystal
Golden Shadow (back-
ground)
Smoked Topaz (Line 1)
Crystal Cooper (Line 2)



2

Flat Backs
No Hotfix
Art. 2028
SS6
Jet (background)
Crystal
Golden Shadow (pattern)





Materials

Tweezers

Adhesive

Customisation patterns – LINED PATTERNS

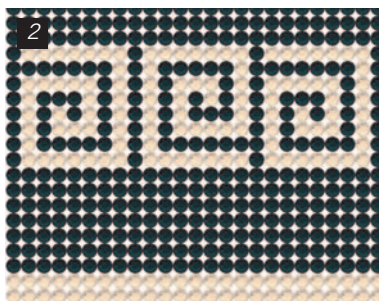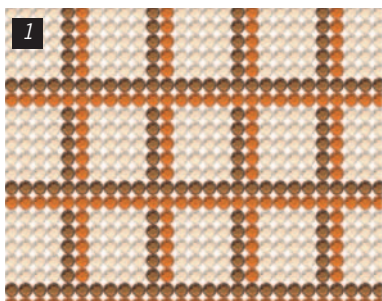

* Dimensions of
Flat Backs: SS6


1cm: 5 Flat Backs –
1cm²: 25 Flat Backs

Total number of Flat Backs:
500 für 20 cm²

1. Measure out the total area on the back of the phone that you wish to customise, and mark it out in pencil. The above examples cover a 4 cm by 5 cm area (corresponding to the dimensions of the Motorola VZ3).
2. Affix the Flat Backs, with the colours in the same positions as in the pattern. Begin with the top horizontal line and the left vertical line, following the pencil lines. These two lines form the framework for the whole design, so it's important to make sure they are straight (otherwise the rest of the pattern will be out of place).
3. Attach the CRYSTALLIZED™ Flat Backs to the face of the phone according to its shape and the size of the screen (to work out how many stones you will need to surround the screen, a 1 cm line requires 5 Flat Backs).

SPARKLING COMPANION

Mobile phone customisation

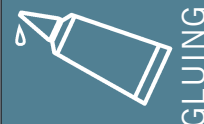

Front

Back

Elements

1

Flat Backs
No Hotfix
Art. 2028
SS12



Fuchsia (petals)
Light Rose (centre)
Crystal (background)

2

Flat Backs
No Hotfix
Art. 2028
SS12



Fuchsia (background)
Purple Velvet (diamonds)
Light Rose (diamonds)

Materials

Tweezers


Adhesive

* Dimensions of Flat Backs:
SS12 (and SS6 for the
vertical finishing stones)


1 cm: 3-4 Flat Backs –
1 cm²: 12 Flat Backs

Total number of Flat Backs:
240 to 255 for 20 cm²
(+ 15 SS6 crystal elements
for the vertical borders).

Customisation patterns – RECURRING PATTERNS

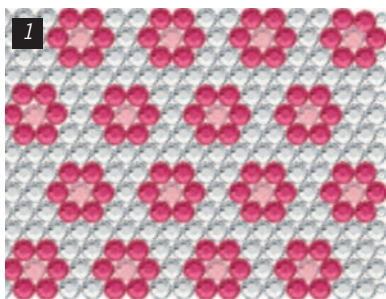

1

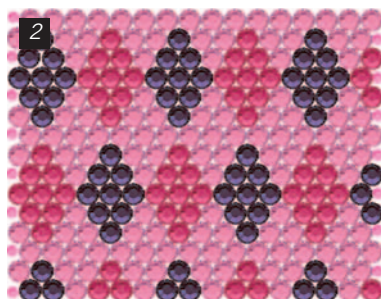


2

1. Measure out the total area on the back of the phone that you wish to customise, and mark it out in pencil.
The above examples cover a 4 cm by 5 cm area (corresponding to the dimensions of the Motorola VZ3).


2. Affix the Flat Backs, with the colours in the same positions as in the pattern. Begin with the top horizontal line, following the pencil line. This line forms the basis for the whole design, so it's important to make sure it is straight (otherwise the rest of the pattern will be out of place).

3. Attach the Flat Backs to the face of the phone according to its shape and the size of the screen (to work out how many Flat Backs you will need to surround the screen, a 1 cm line requires 3-4 Flat Backs).

HOW TO AFFIX FLAT BACKS NO HOTFIX

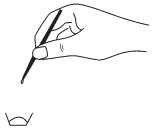


Dip the end of a wooden toothpick in some glue

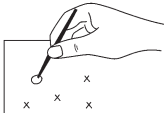

Decide beforehand where you wish to affix the Flat Back and place a small amount of glue there



Pick up the flat-bottom Flat Back (crystal side facing up) with the tweezers.

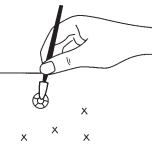

Position the Flat Back on top of the glue and press lightly for a few seconds, so as to ensure proper adhesion (you may wish to use a second toothpick here)

Materials: tweezers

Recommended glues: non-solvent, slow-drying glue